



Installation Instructions for Vista System Sneeze Guards



1. Open box and layout side supports and sneeze guard. The plastic grommets that hold the sneeze guard to the supports are in a plastic bag attached to the side supports under the cellophane wrapping.

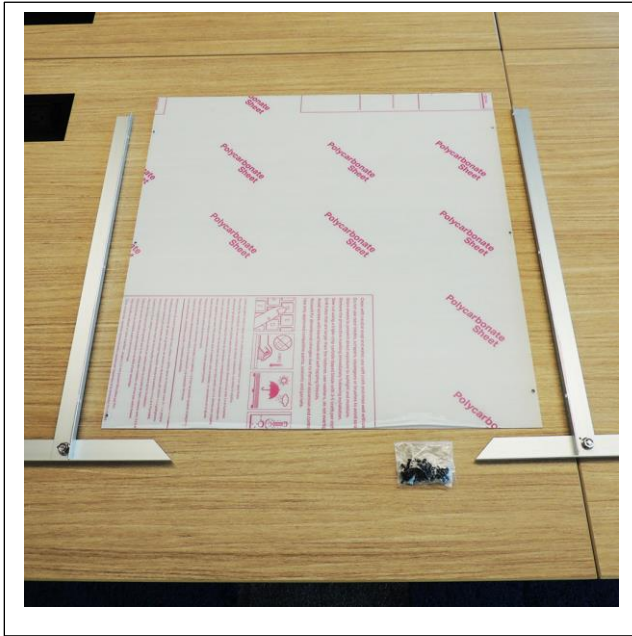


2. Remove the protective film from the sneeze guard. Remove the plastic film from the double-sided tape on the supports.

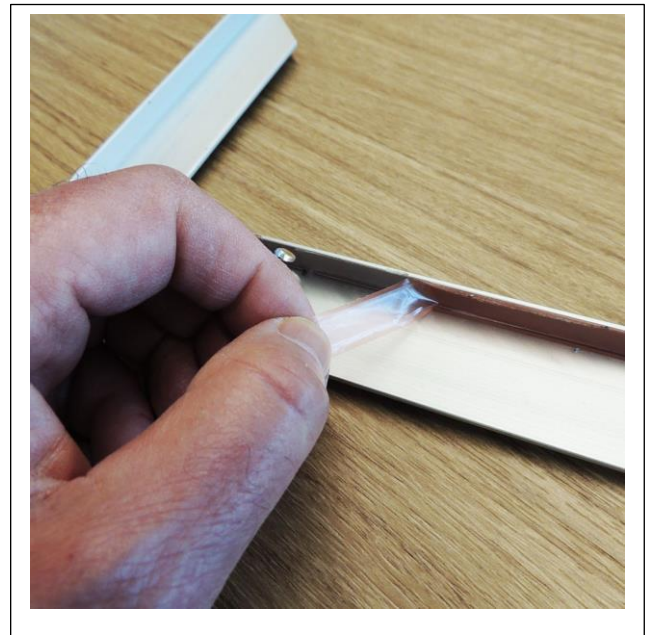


3. Line up the holes on the sneeze guard to the supports and make sure they are all in alignment. For sneeze guards over 36" wide there will also be a top support for stability. Insert the female part of the grommet through the side support and guard. Then insert the male part of the grommet into the female part and push until it is flat to the female part securing the guard to the support. Repeat until all grommets are in place.

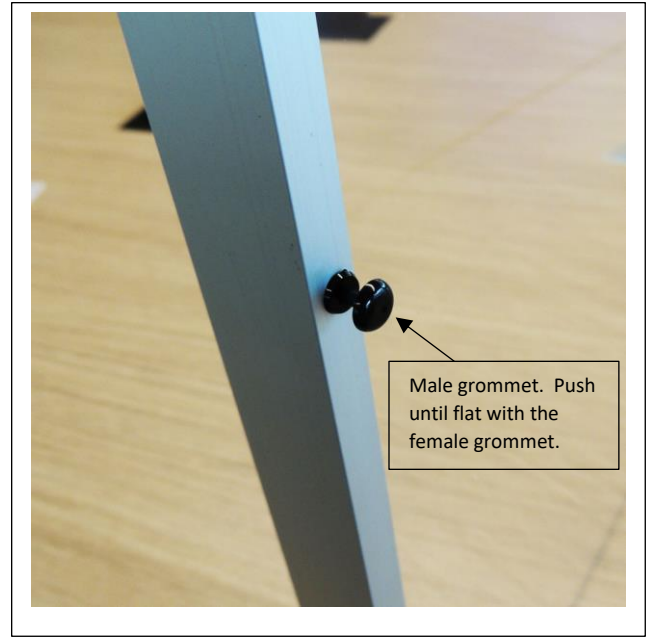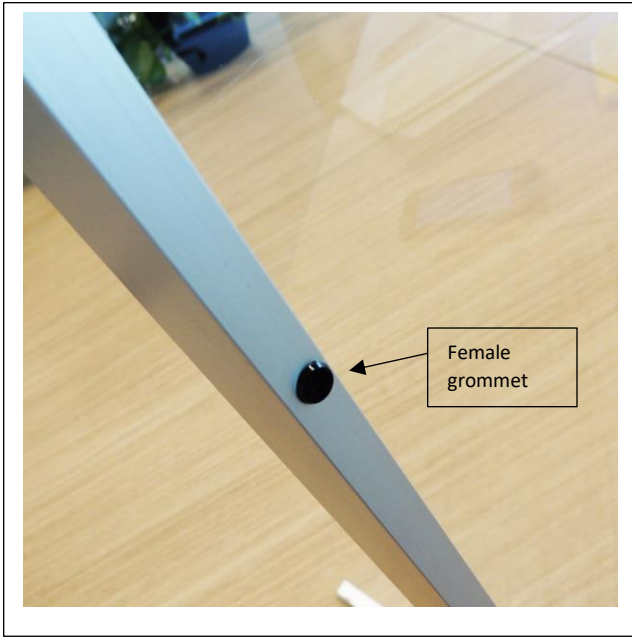

4. Your sneeze guard installation is now complete!

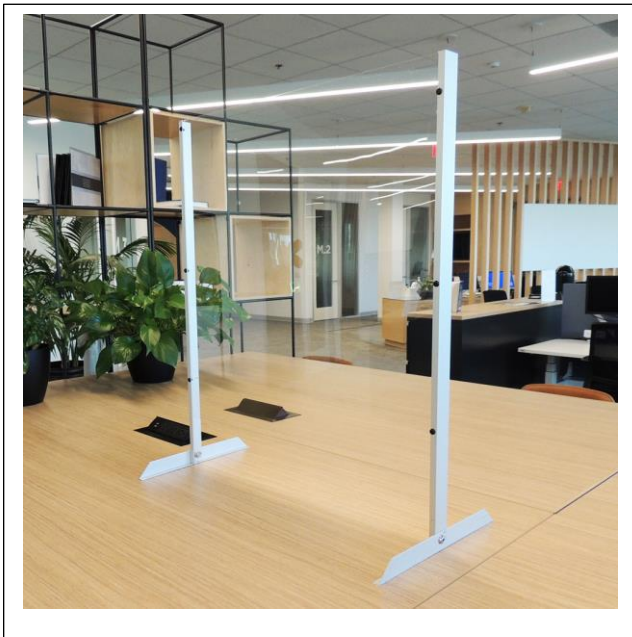

Sneeze Guard – without top support bar

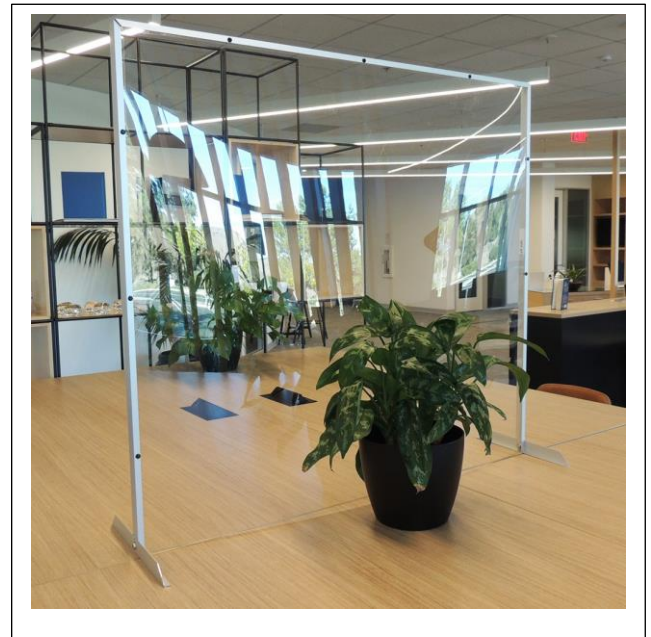

Sneeze Guard – with top support bar

Any questions? Please email us at sales@sign-frame.com or call us on our toll-free number.